20463

04-05 DODGE
RUMBLE BEE
HOOD SCOOP

20463

04-05 DODGE
RUMBLE BEE
HOOD SCOOP

BILLET INSERT – HOOD SCOOP

Tools Required:

Phillip Screw Driver
Socket or wrench
1/8 Drill Bit

Hardware / Parts List:

1 Billet Insert (3 bars)
2 6-32 X 1.5" Machine Screw **(SHAVED HEAD SCREW)**
2 #10 Flat Washers
2 6-32 Nylon Locking Nuts

Read and understand instructions before attempting installation

Step 1

Remove the hood scoop from hood. Test fit the billet into the opening. With a marker, mark the centers of mounting tabs on plastic for drilling. Remove the billet and drill a 1/8" hole. Center the billet into scoop. Place the custom machine screws through the front of the billet and plastic backing. Place a flat washer and a nylon locking nut on each screw and tighten.

Step 2

Re-install the hood scoop to vehicle.
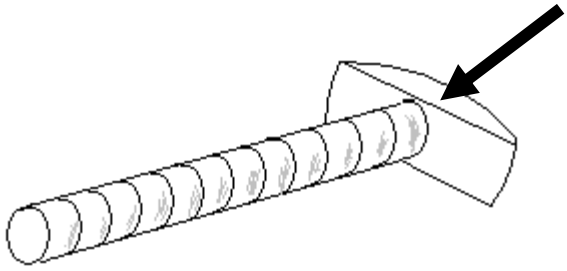
Thank you for purchasing your T-Rex billet grille **9|26|07**